 



USER MANUAL

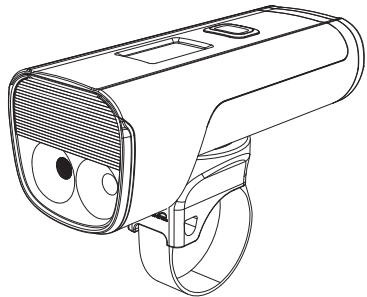

ALLTY 2000 BICYCLE LIGHT

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

 IN THE BOX

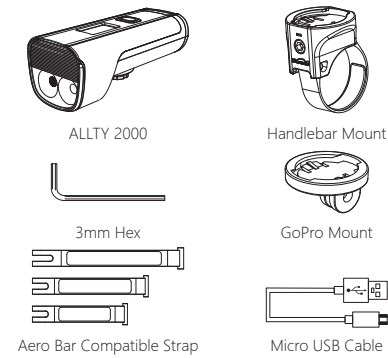

SPECIFICATIONS

LUMENS / RUNTIME


MODE	BRIGHTNESS	10%	25%	50%	100%
	 h:min	/	/	/	35
	 h:min	100	250	500	1000
	 h:min	100	250	500	1000
	 h:min	200	500	1000	2000
	 h:min	200	500	1000	1800

165m	7,000cd	1m	IPX5
42*40*99mm 1.65*1.57*3.90in		176g / 6.2oz	

All performance measurements in accordance with ANSI/NEMA FL1-2009 Standard. The tests are performed indoors under a room temperature of 25 degrees celsius with windless conditions. The runtime may vary depending on the external temperature and ventilation conditions, and these biases may affect the results of testing.

Note: The maximum output brightness will decrease as the battery voltage decreases.

 HOW TO INSTALL

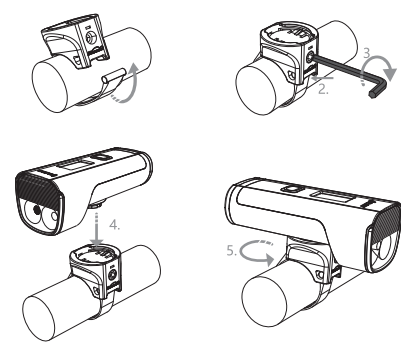

BEFORE FIRST USE

 
The bike light arrives in lockout mode.

Before first use, please unlock the light.


If the light is left unused, carried, or transported, please lock out the power button to prevent potential damage from the heat built-up due to accidental activation.

Lock: When the light is off, press and hold the power button about 3 seconds until the Lock Icon () appears on the display screen.



Unlock: When the light is locked, press and hold the power button about 3 seconds until the Unlock Icon () appears on the display screen.

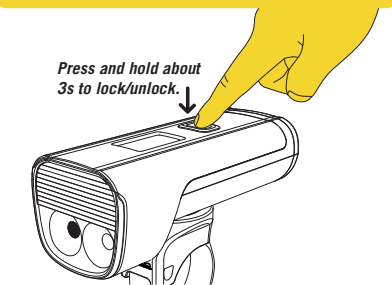


HOW TO RECHARGE

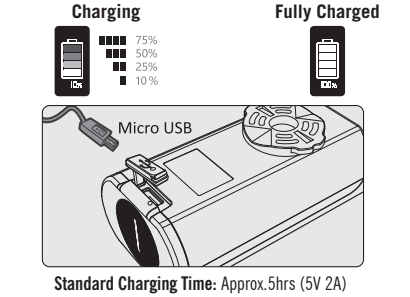 

OLED SCREEN

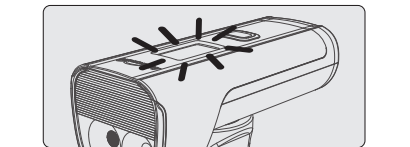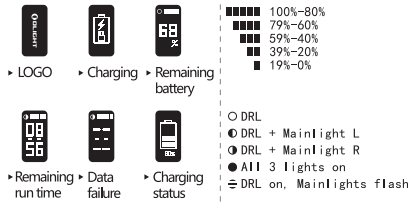  

HOW TO EXCHANGE BATTERY MODULE

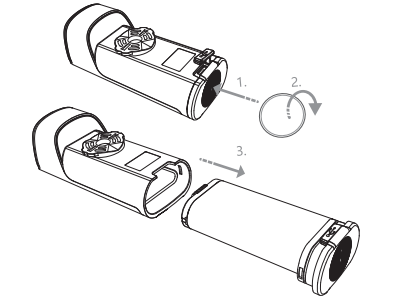 

DANGER

- DO NOT shine the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
- DO NOT cover the light head when the bicycle light is on, or place the bicycle light head on the ground. The radiation energy of the bicycle light may cause damage to the bicycle light itself, or even result in burning to flammable objects.

WARNING

- Keep out of reach of children.
- The light contains a lithium-ion battery. Certain restrictions may apply to this product when traveling, especially when traveling by air. Always check with your carrier for specific restrictions prior to traveling with this product.
- DO NOT clean the lens with alcohol or any other chemicals.

NOTICE

- Store the light at room temperature in a dry place. Avoid moisture, or extreme hot or cold.
- Store the light in the charged condition. Avoid "deep discharge". Battery life will decrease if the light is stored in a fully discharged condition.
- Over time, the run time of the battery will diminish. Expect about 500 full charges, depending on care. After a full life, the battery will continue to charge but with a lower run time.
- When the run time is unsatisfactory, please recycle. DO NOT open the case of the light or incinerate.

EXCLUSION CLAUSE

Olight is not liable for damages or injuries sustained resulting from the usage of the product inconsistent with the warnings in the manual, including but not limited to using the product inconsistent with the recommended lockout mode.

CONTENTS

(EN) English	01
(CHS) 简体中文	02
(NED) Nederland	02
(DE) Deutsch	02
(JP) 日本語	03
(FR) Français	03
(IT) Italia	03
(PL) Polska	04

(EN) English

HOW TO OPERATE

Long press to turn on/off the light, click to change the brightness level and flash modes, and double click to switch modes. Mode memory function will save the last selected mode and brightness.

LOCK: When the light is off, press and hold the power button about 3 seconds until the Lock Icon () appears on the display screen.

UNLOCK: When the light is locked, press and hold the power button about 3 seconds until the Unlock Icon () appears on the display screen.

(CHS) 简体中文

如何操作

长按开机/关机，单击切换不同亮度或闪烁方式，双击切换不同模式。再次开机进入上次关机时的模式及亮度。

锁定：关机状态下，长按开关约3秒直到屏幕上出现锁定图标 ()。

解锁：锁定状态下，长按开关约3秒直到屏幕上出现解锁的图标 ()。

(NED) Nederland

HOE TE BEDIENEN

Druk lang om het licht aan/uit te zetten, klik om het helderheidsniveau en de flits modi te veranderen en dubbelklik om tussen de modi te schakelen. De modus geheugenfunctie zal de laatst geselecteerde modus en helderheid opslaan.

VERGRENDELEN: Als de lamp uit is, houdt u de aan/uit-knop ongeveer 3 seconden ingedrukt totdat het vergrendelingspictogram () op het scherm verschijnt.

ONTGRENDELEN: Als de lamp vergrendeld is, houdt u de aan/uit-knop ongeveer 3 seconden ingedrukt totdat het ontgrendelingspictogram () op het scherm verschijnt.

(DE) Deutsch

BEDIENUNG

Gedrückt halten, um das Licht ein-/auszuschalten. Kurz Anklicken zum Umschalten der Helligkeitsstufe und Blitzmodi und Doppelklicken zum Umschalten der Modi. Die Modus-Speicherfunktion wird den zuletzt ausgewählten Modus und die Helligkeitsstufe speichern.

SPERREN: Wenn das Licht aus ist, halten Sie die Ein/Aus-Taste für etwa 3 Sekunden gedrückt, bis das Sperrsymbol () auf dem Anzeigebildschirm erscheint.

ENTSPERREN: Wenn das Licht gesperrt ist, halten Sie die Ein/Aus-Taste für etwa 3 Sekunden gedrückt, bis das Entsperrungssymbol () auf dem Anzeigebildschirm erscheint.

(JP) 日本語

使用方法

ON/OFF ランプを長く押して、クリックして輝度のレベルとフラッシュモデルを変更し、ダブルクリックして SWITH モデルに切り替えます。モデルメモリ機能が最後のモデルと輝度の記録を残ります。

ロック：ライトが消えているとき、ロック状態のアイコン () がディスプレイに現れるまで電源ボタンを 3 秒以上長押ししてください。

ロック解除：ライトがロックされているとき、ロック解除状態のアイコン () がディスプレイに現れるまで電源ボタンを 3 秒以上長押ししてください。

(FR) Français

COMMENT L'UTILISER

Appuyez longuement pour allumer/éteindre la lumière, cliquez pour changer le niveau de luminosité et les modes de flash, et double-cliquez pour basculer d'un mode à l'autre. La fonction de mémoire de mode enregistre le dernier mode et la dernière luminosité sélectionnés.

VERROUILLAGE: Lorsque le voyant est éteint, appuyez sur le bouton d'alimentation pendant environ 3 secondes jusqu'à ce que l'icône de verrouillage () apparaisse sur l'écran d'affichage.

DÉVERROUILLAGE: Lorsque le voyant est allumé (état verrouillé), appuyez sur le bouton d'alimentation pendant environ 3 secondes jusqu'à ce que l'icône de déverrouillage () apparaisse sur l'écran d'affichage.

(IT) Italia

FUNZIONAMENTO

Premere a lungo per accendere / spegnere la luce, cliccare per modificare il livello di luminosità e le modalità flash e fare doppio clic per cambiare modalità. La funzione di memorizzazione della modalità salverà l'ultima modalità e luminosità selezionate.

BLOCCO: Quando la luce è spenta, tenere premuto il pulsante di accensione per circa 3 secondi finché l'icona di Blocco () non appare sullo schermo.

SBLOCCO: Quando la luce è bloccata, tenere premuto il pulsante di accensione per circa 3 secondi finché l'icona di Sblocco () non appare sullo schermo.

(PL) Polska

SPOSÓB OBSŁUGI

Długie naciśnięcie włącza/wyłącza światło, kliknięcie zmienia poziom jasności i tryby migania, a podwójne kliknięcie zmienia tryby przełączania. Funkcja pamiętania trybu zapisuje ostatnio wybrany tryb i jasność.

BLOKOWANIE: Przy nieświecącej się kontrolce, naciśnij i przytrzymaj przycisk zasilania przez około 3 sekund aż wyświetli się na ekranie ikona blokady () .

ODBLOKOWANIE: Przy zablokowanej kontrolce, naciśnij i przytrzymaj przycisk zasilania przez około 3 sekund aż wyświetli się na ekranie ikona Odblokuj () .

WARRANTY

Within 30 days of purchase: Return to the original seller for repair or replacement.

Within 2 years of purchase: Return to Olight for repair or replacement.

This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an authorized retailer or Olight itself.

USA Customer Support

cs@olightstore.com

Global Customer Support

customer-service@olightworld.com

Visit www.olightworld.com to see our complete product line of portable illumination tools.



Dongguan Olight E-Commerce Technology Co., Ltd
4th Floor, Building 4, Kegou Industrial Park, No 6 Zhongnan Road,
Changan Town, Dongguan City, Guangdong, China.

Made in China

